# GSM-5025 SMS CLIENT PROGRAMMING for ANY TIME OPENING

- 1. Default password 1234
- 2. Only 6 users (guests) 001 to 006 can receive SMS replies from GSM
- 3. All commands must be in capital letters
- 4. Only stored Guests can open gate

# **SETUP NEW PASSWORD (if required)**

Send SMS - pwdPnewpassword

e.g. 1234P8765

-> New password - 8765

# **ENTER GUEST NUMBERS - for ANYTIME OPENING**

Send SMS - pwdAid number#guestnumber#

e.g. 1234A002#59831020#

-> Guest number – 59831020 in ID 002

(gate can be opened any day and any time)

### **CHECK SINGLE GUEST NUMBER**

Send SMS - pwdAid#

e.g. 1234A011#

->Displays Guest Number at ID 011

# **CHECK MULTIPLE GUEST NUMBERS**

Send SMS - pwdALfrom id#to id#

e.g. 1234AL001#004#

->Displays Guest Number at ID 001

ID002 ID003 ID004

#### **DELETE GUEST**

Send SMS - pwdAid##

e.g. 1234A012##

-> Guest number in ID 012 now deleted

#### **CHECK CURRENT STATUS**

Send SMS - pwdEE

->Displays:

- Arm / Disarm Status

- Digital Input 1 & 2 status

- Relay status

- Mobile signal strength

(31 strong, lower than 14 is weak)

- AC power supply status

#### **LIGHT INDICATORS**

Power On - Light ON - 12DC power connected

GSM - Light Flashing every 1 second – searching for GSM network on power up

Light Flashing every 2 second – found GSM network - normal status

Light Off - cannot find network

Alarm On

Not used

Relay On

Not used

**Note:** pwd = password e.g. 1234 - 1234 is factory default

id = guest ID number 001 - 999

guestnumber = guest phone number -mobile or land line. 001 to 006 should all be mobile phones.

If password is changed, you must record and keep number in safe place.

# **GATE ACCESS HISTORY**

A history of of gate openings can be downloaded to your mobile phone with details of phone number, time and date.

To activate this feature do as follows:

## 1. SET TIME and DATE (once only)

Send SMS - pwdTELnumber of SIM card#

e.g. 1234TEL0460773697#

confirms with "Set Success!"

#### 2. CHECK HISTORY RECORD

Send SMS - pwdL#AABBCC#DDEEFF#

AA & DD = year

BB & EE = month

CC & FF = day

AABBCC = start time

DDEEFF = end time

e.g. 1234L#190315#190325#

This will check all gate openings from Mar 15<sup>th</sup> 2019 to Mar 25<sup>th</sup> 2019

Example - each return SMS could read:

19-03-15 11:21:45 0427300444 Relay ON

#### 3. INSTALL APP on PHONE/IPAD etc

- a. Go to App Store
- b. Search for rtu5025
- c. Download App then follow instructions