

PROGRAMMING CODE EZY KEYPAD – WITH KIT

1. Programming Code:

Contact Solartronics for your programming code unless you have changed your code.

To change programming code, proceed as follows:

- a. Enter your code plus* e.g. 7890* - will hear a long beep and BLUE led should come on.
- b. Enter 69# - short beep.
- c. Enter new 4 digit programming code plus # - 1 x long beep then 1 x short beep.
- d. Keypad exits programming mode.

2. To Add Client PIN'S (channel 1 max 8, channel 2 max 3)

- a. Enter Programming Mode – (e.g.7890*) – Blue led comes on with long beep.
- b. Enter 2 digit channel number plus # - 01# (channel 1) or 02# (channel 2) - confirms with 1 to 8 beeps (CH1) or 1 to 3 beeps (CH2) to indicate next position in each channel.
- c. Enter 4 digit Client PIN plus # - e.g. 9876# - confirms with 1 x long beep and 1 x short beep.
- d. Keypad exits programming mode.

Note:

1. If PIN code already exists the RED led will flash 5 times and exit programming mode.
2. If all 8 PIN's are loaded and a 9th Pin is attempted, when the channel number is entered the RED led will flash 5 times. If the PIN is entered after the RED led stops flashing, it will delete the first PIN entered and enter this new PIN in Position 1.
3. If more than 8 PINS are required, there are 3 additional PIN's available in channel 2 (see 2. above)
4. When first PIN is entered the factory default PIN (1111-CH1, 2222-CH2) will be overwritten.

3. To Delete all User PIN'S

- a. Enter Programming Mode – (e.g.7890*) - Blue led comes on with long beep.
- b. Enter 00 plus # - 00#- confirms with 1 x long beep and 1 x short beep
- c. All client PIN's are deleted. Channel 1 can be activated using PIN 1111, channel 2 can be activated using PIN 2222 (factory defaults)
- d. Programming code and coding to receiver remain unchanged.
- e. Keypad exits programming mode.

4. Security Lock

If 5 attempts are made to enter an incorrect PIN, the keypad will lock and beep 3 times.

The RED led will come on and go off in 2 minutes with 1 beep to enable keypad again.

5. Factory Reset

If programming Code is forgotten, contact Solartronics to have it reset.

6. To Code Keypad into Indoor Receiver (has P1 and P2 buttons) (already done in factory)

- a. Press and release P1 button once on receiver. (momentary for receiver channel 1)
- b. Enter a Client PIN with # that's in channel 1. (if no client PIN has been entered use 1111 for channel 1 and 2222 for channel 2)
- c. If channel 2 is being used (additional 3 PIN's) repeat steps a. and b. using client PIN in channel 2. (if no client PIN has been entered use 2222)
- d. Keypad should now be coded to the receiver.

7. To check which channel a PIN belongs to (channel 1 or 2)

- a. Enter Programming Mode – (e.g.7890*) - Blue led comes on with long beep.
- b. Press 86# - 1 long beep then 1 short beep
- c. Enter PIN code to check plus #.
- d. 1 long beep = channel 1, 2 long beeps = channel 2, 1 x short beep = PIN not entered.
- e. Keypad exits programming mode.

8. Battery Test

- a. Enter Programming Mode – (e.g.7890*) - Blue led comes on with long beep.
- b. Press 89#
- c. 1 long beep indicates battery okay, short beep and RED led indicates battery low
- d. Keypad exits programming mode.