


# VEHICAL LOOP INSTALLATION - ELSEMA/CODEEZY SYSTEM

Twist cable no less than 1 twist per 15mm.  
 Install in conduit or poly pipe then use 20mm corrugated conduit into control box.

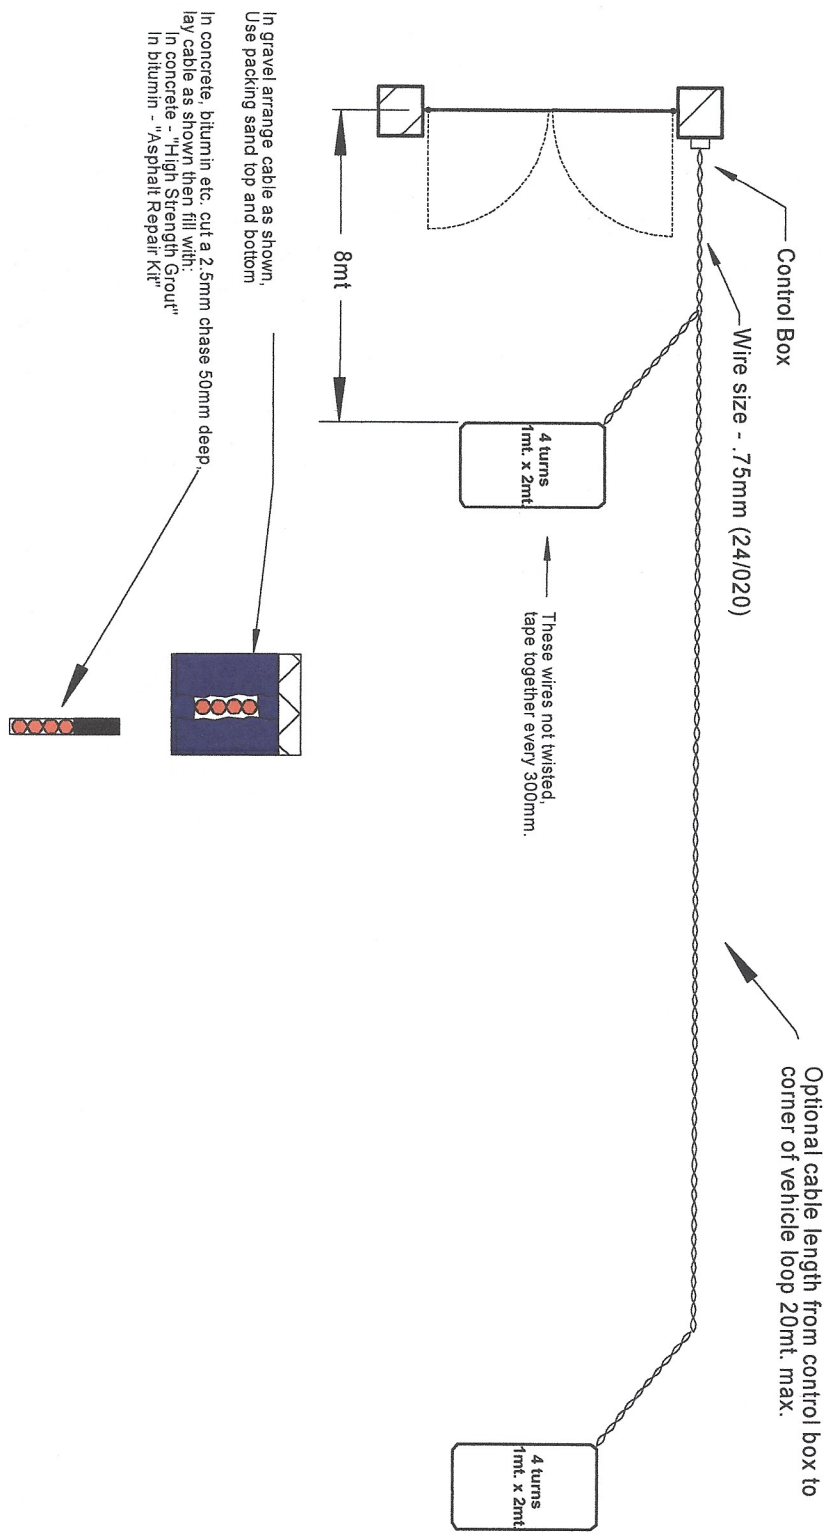

In gravel driveway cut a trench (1mt x 2mt) approx 10cm wide x 10cm deep.  
 with one corner out to edge of drive.  
 Place packing sand in bottom of trench with loop on top positioned as shown.  
 Place packing sand on top and side of loop then finish with driveway rock on top.